

Dual Clamp Instruction

Read before use

<Check before use>

The holding capacity noted in catalog is for reference.

The value cannot be guaranteed as it depends on the condition of use.

Use caution as the holding force will drop due to depending on the holding position, bolt adjustment and type of bolt uses.

When selecting and using clamps, allow enough margin for the holding capacity.

<Precaution>

Mounting Method: Mount by fixing bolts securely.

Holding Position: It does not hold or clamp on the way of actuating.

It only can hold at holding position.

(Toggle and cam mechanism at work)

Lubrication: Apply oil to the slides and friction parts on a regular basis.

Chip removing: When using in place where there are chips, remove chips around the main unit, especially the rivets and rotating parts by using an airgun before clamping & unclamping.

Inspection: Inspect regularly for bolts and nuts that secures the body and clamp arm

Operating environment: Using in the corrosive or inappropriate environment causes malfunction, damage and transform.

Precaution: Do not insert your hands and fingers in range of the action and wear protective gloves for safety when mounting or operation.
Do not use at exceed the holding capacity.

<Note>

Specification will change for improvement without notice.

The holding capacity and durability noted in catalogue is maximum value

The holding capacity will decrease due to the condition of usage.

Apply oil to the slides and friction parts on a regular basis.

Wear protective gloves for safety when mounting or operation.